

Single lever sink mixer Energysave KITCHEN




CHARACTERISTICS

Cartridge Spare Parts

ZZ96373000

 35 mm Cartridge



24

Ø

350



EcoStop

EcoStop feature limits water flow to approximately 50% of maximum output with one point of resistance on setting. Push slightly past the middle stop only when full water output is required. This will save water up to 50%.

321

45

CH.11

G.3/8"




Thanks to the EnergySave device, only cold water will be drawn if the lever is operated in the central lever is operated in the central position, so that the water heater will not be engaged and no hot water wasted, leading to considerable savings in energy and costs. The temperature can be adjusted by rotating the lever to the left, until the desired temperature is reached.







Single lever sink mixer Energysave KITCHEN

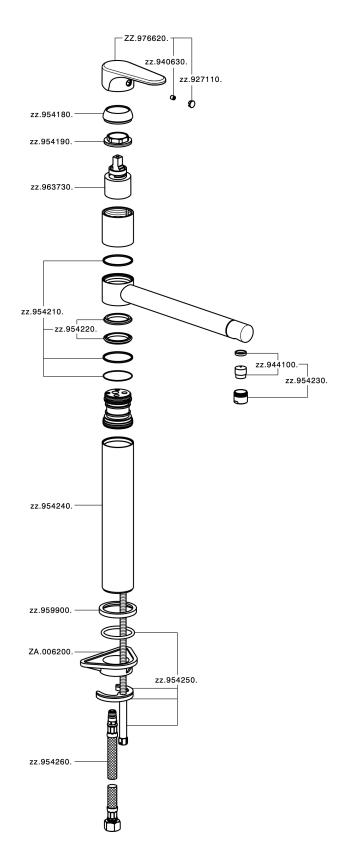

AH001585

https://en.huberitalia.com/single-lever-sink-mixer-energysave-kitchenah001585

2024-05-02