

Single lever sink mixer Energysave KITCHEN_AH003535



280 250 190 Ø 50 CH.11

EcoStop

EcoStop feature limits water flow to approximately 50% of maximum output with one point of resistance on setting. Push slightly past the middle stop only when full water output is required. This will save water up to 50%.



AH003535

Single lever sink mixer Energysave, swivel spout, G.3/8" stainless steel flexible hoses

AVAILABLE FINISHINGS



21 21 Chrome



2F 2F Brushed Nickel



40 40 Matt Black

CHARACTERISTICS

Cartridge Spare Parts

ZZ95409000

35 mm Cartridge



EnergySave

G 3/8"

Thanks to the EnergySave device, only cold water will be drawn if the lever is operated in the central lever is operated in the central position, so that the water heater will not be engaged and no hot water wasted, leading to considerable savings in energy and costs. The temperature can be adjusted by rotating the lever to the left, until the desired temperature is reached.



2024-11-21