


Single lever sink mixer Energysave KITCHEN

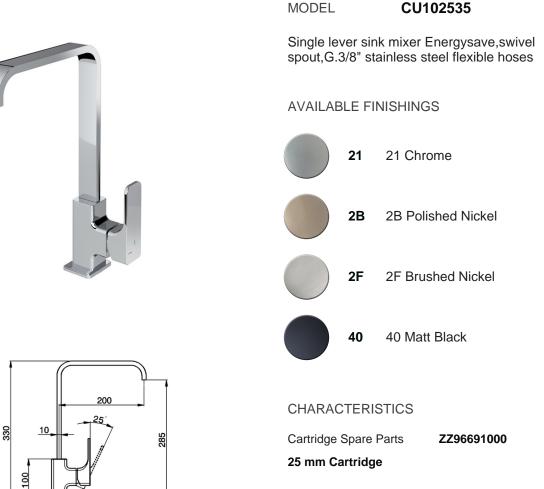



Thanks to the EnergySave device, only cold water will be drawn if the lever is operated in the central position, so that the water heater will not be engaged and no hot water wasted, leading to considerable savings in energy and costs. The temperature can be adjusted by rotating the lever to the left, until the desired temperature is reached.

15

350

Ø32 CH.11

G.3/8"



2024-05-04